



INFORMATIVE 06

TIPS ZEN S.A.

FREEWHEEL PULLEYS' ASSEMBLY AND DISASSEMBLY TOOL

In this tip we will show the **ASSEMBLY AND DISASSEMBLY TOOL OF FREEWHEEL PULLEY** in just a few steps:




1 step

Some **Freewheel Pulley** Manufacturers offer the **product with hexagonal axis**. It serves for the pulley to be removed from the wheel's axis of the alternator.



2 step

In **ZEN's Freewheel Pulley**, the axis is not **hexagonal**, it is **ridged** according to original standard. The only difference is from the manufacturer's choice, but it does not change the product.

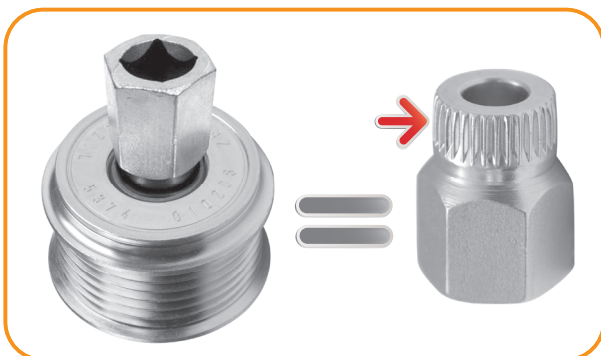

3 step

For the **removal** of **ZEN's Freewheel Pulley**, from the alternator's wheel axis, the use of **ZEN 12623 Disassembly Tool** is necessary. This tool is universal and can be applied in all of **ZEN's Freewheel Pulleys**.